HOME
DECORATORS
COLLECTION

BF-25336 RIDGEMORE DOUBLE HAMPER 27"Hx35.50"Wx14"D

INV#30628

ASSEMBLY INSTRUCTIONS

Made In China

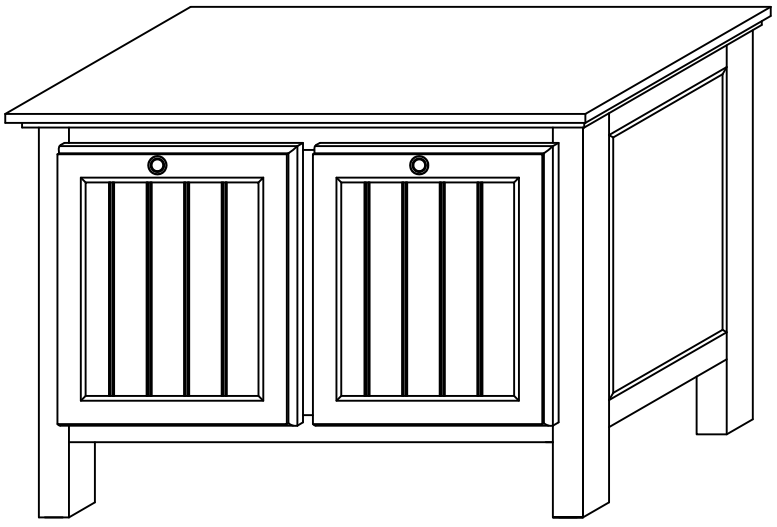

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have came loose inside the carton during shipment.Count all parts and material hardware, then compare with parts list to be sure all parts are present. If any parts are missing or damaged, phone, fax, or mail to our Customer Service Department for efficient and speedy service. Please indicate the model number and code letter of part(s) needed.

IMPORTANT NOTE: Follow instructions listed below in proper sequence as numbered to assure fast, easy and correct assembly.

STRUCTURAL DIAGRAM

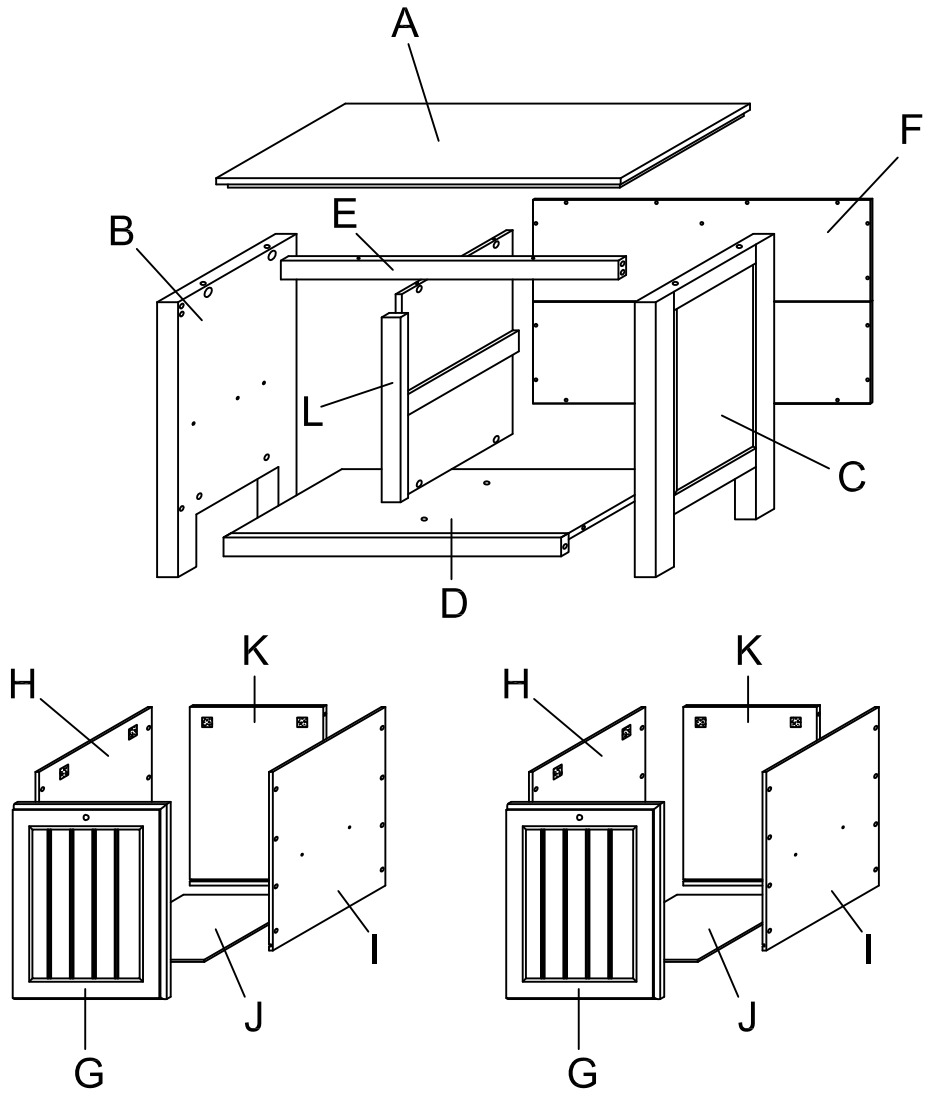

PARTS LIST

A TOP PANEL-1PC	B  LEFT SIDE PANEL-1PC	C  RIGHT SIDE PANEL-1PC	D  BOTTOM PANEL-1PC
E  PANEL-1PC	F 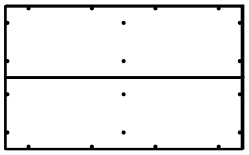 BACK PANEL-1PC	G 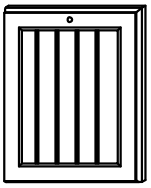 DRAWER PANEL FRONTS-2PCS	H  LEFT DRAWER PANEL SIDES-2PCS
I  RIGHT DRAWER PANEL SIDES-2PCS	J  DRAWER PANEL BOTTOMS-2PCS	K 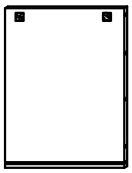 DRAWER PANEL BACKS-2PCS	L 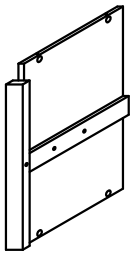 STAND PANEL-1PC
M 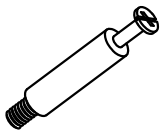 CAM-BOLTS-12PCS	N CAM-LOCKS-12PCS	O  HANDLES-2PCS	P 8mm × 1/2" SCREWS-2PCS
Q  DOWELS-6PCS	R 6mm × 3/4"  SCREWS-32PCS	S 6mm × 1/2" SCREWS-20PCS	T 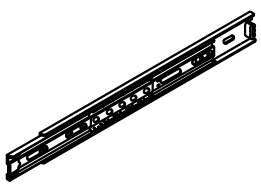 OUTER SLIDERS-4PCS

U 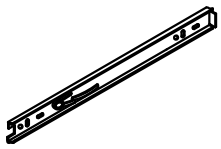 INNER SLIDES-4PCS	V 7mm × 5/8"  SCREWS-20PCS	W 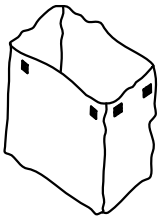 BAGS-2PCS	X 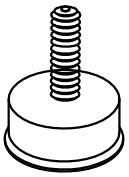 FEET-4PCS
Y CAM-TOOL-1PC	Z 8mm × 1-1/4" 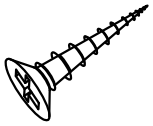 SCREWS-2PCS		

NOTE: THE SURFACE WITH THE STICKER IS THE BACK SIDE.

NOTE: • UPON OPENING, THOROUGHLY CLEAN ALL WOOD SURFACES TO REMOVE DUST AND DIRT THAT MAY HAVE SETTLED ONTO FINISH DURING SHIPMENT. IN ORDER TO PREVENT DAMAGE DURING ASSEMBLY, PLEASE ASSEMBLE THIS ITEM WITH AT LEAST TWO PEOPLE.

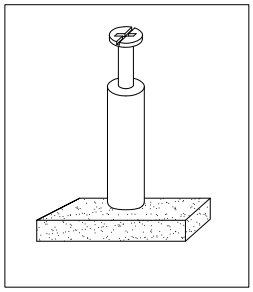

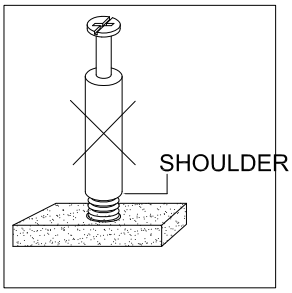

NOTE: TURN THE CAM-BOLT SCREWS UNTIL THEY ARE TIGHT, THE SHOULDER SHOULD BE AGAINST THE SURFACE OF THE PART.

HOW TO USE THE CAM-TOOL

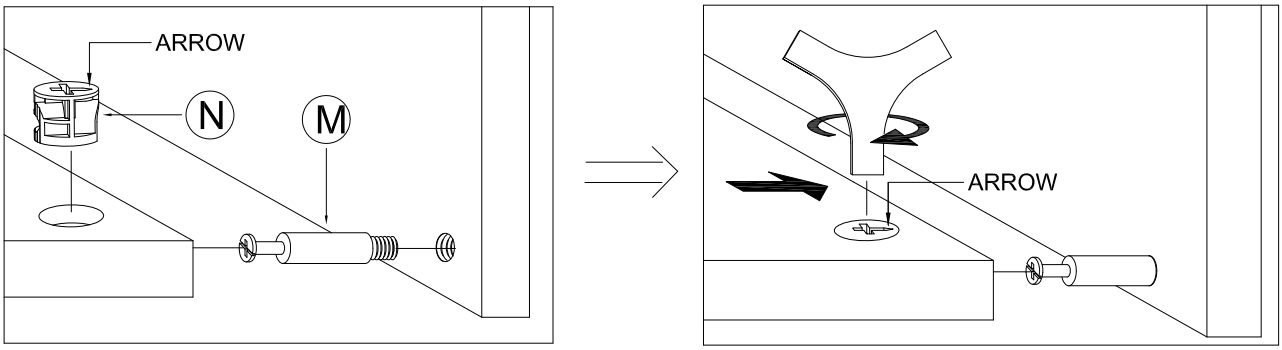

NOTE: • THE ARROWS ON THE HIDDEN CAM-LOCKS SHOULD POINT TO THE CAM-BOLTS

HOW TO SEPARATE GLIDES

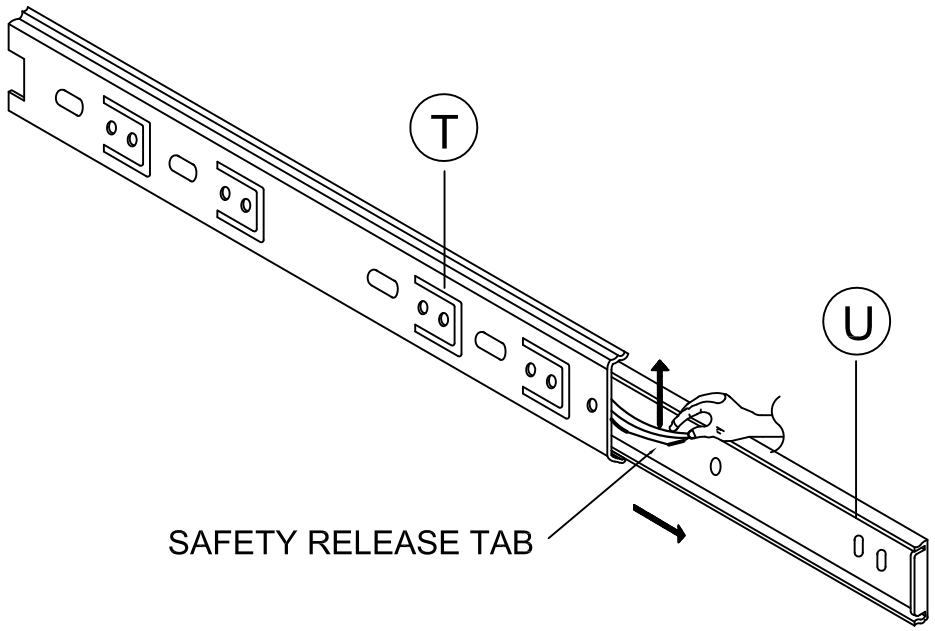

PRIOR TO ASSEMBLY, WE SUGGEST SEPARATING THE INNER GLIDES FROM THE OUTER-GLIDES, SIMPLY PULL THE LEFT/RIGHT INNER GLIDES FROM THE OUTER GLIDES EXPOSING A SMALL BLACK SAFETY RELEASE TAB, BY PUSHING THE SAFETY RELEASE TAB. YOU WILL BE ABLE TO SEPARATE THE GLIDE

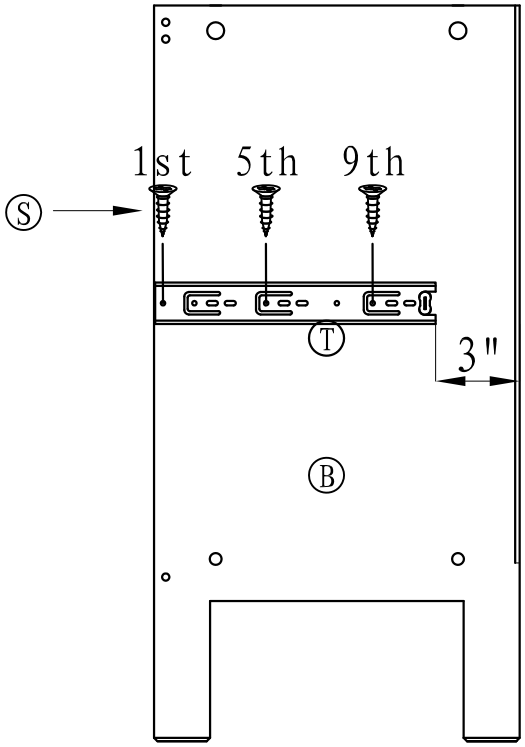

1). ASSEMBLE THE OUTER SLIDER(T).

- ATTACH THE OUTER SLIDER(T) TO LEFT SIDE PANEL(B) USING 3 SCREWS(S).

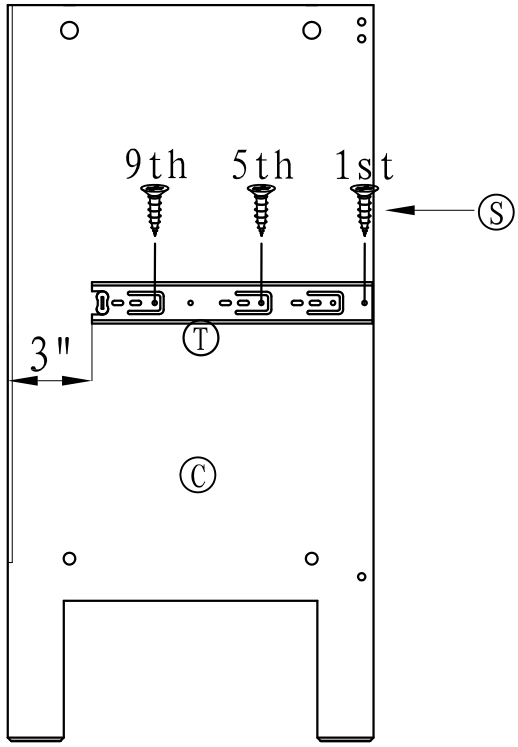

2). ASSEMBLE THE OUTER SLIDER(T).

- ATTACH THE OUTER SLIDER(T) TO RIGHT SIDE PANEL(C) USING 3 SCREWS(S).

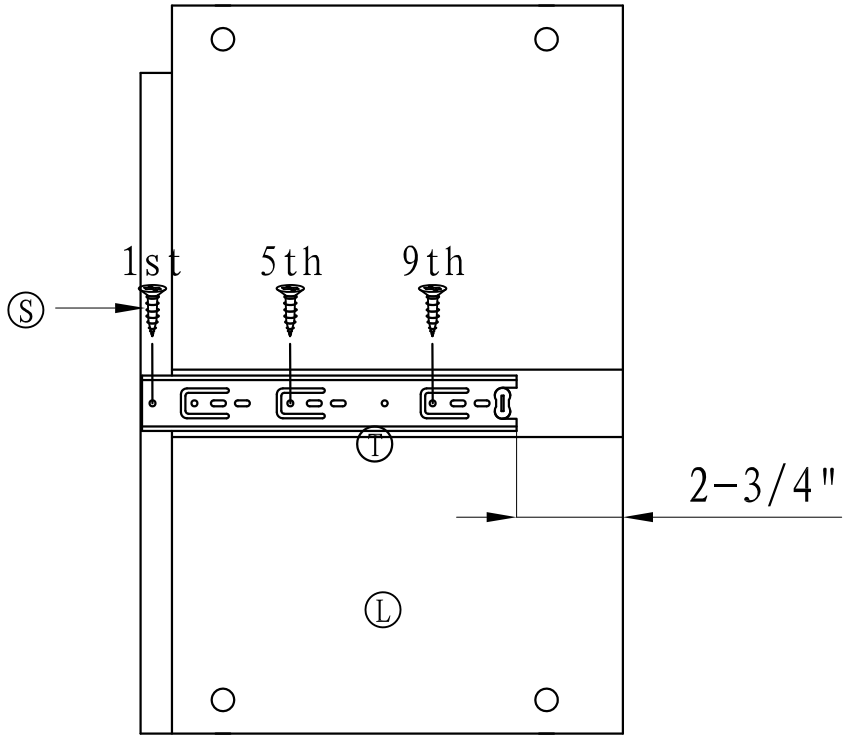

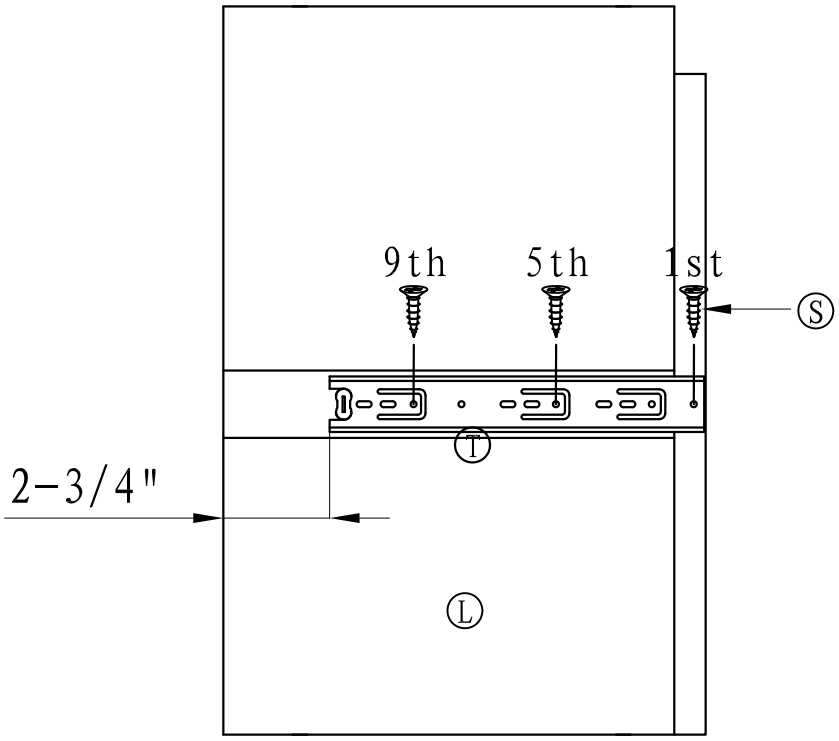

3). ASSEMBLE THE OUTER SLIDERS(T).

- ATTACH THE OUTER SLIDERS(T) TO STAND PANEL(L) USING 6 SCREWS(S).

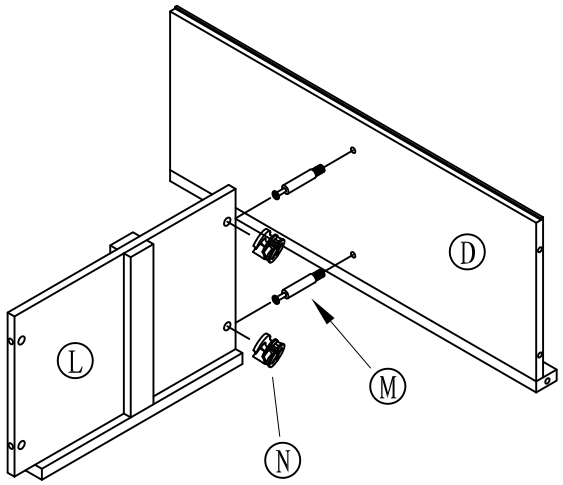

4). ASSEMBLE THE STAND PANEL(L).

- ROTATE 2 CAM-BOLTS(M) INTO THE HOLES IN THE BOTTOM PANEL(D).
- PLACE THE CAM-BOLTS(M) INTO THE HOLES IN THE STAND PANEL(L) AND ATTACH USING 2 CAM-LOCKS(N).

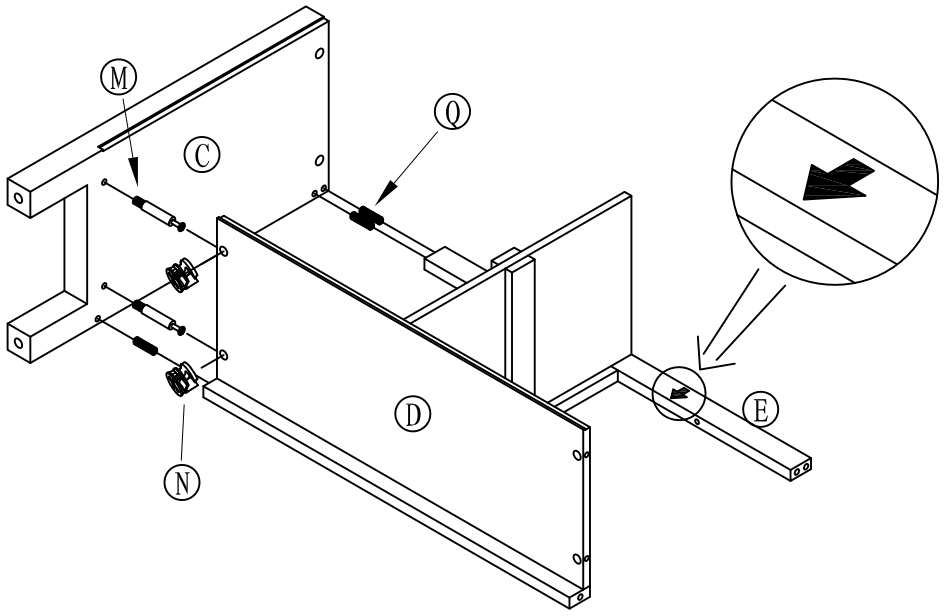

5). ASSEMBLE THE RIGHT SIDE PANEL(C).

- ROTATE 2 CAM-BOLTS(M) AND INSERT 3 DOWELS(Q) INTO THE HOLES IN THE RIGHT SIDE PANEL(C).
- PLACE THE CAM-BOLTS(M) AND DOWELS(Q) INTO THE HOLES IN THE PANEL(D/E) AND ATTACH USING 2 CAM-LOCKS(N).

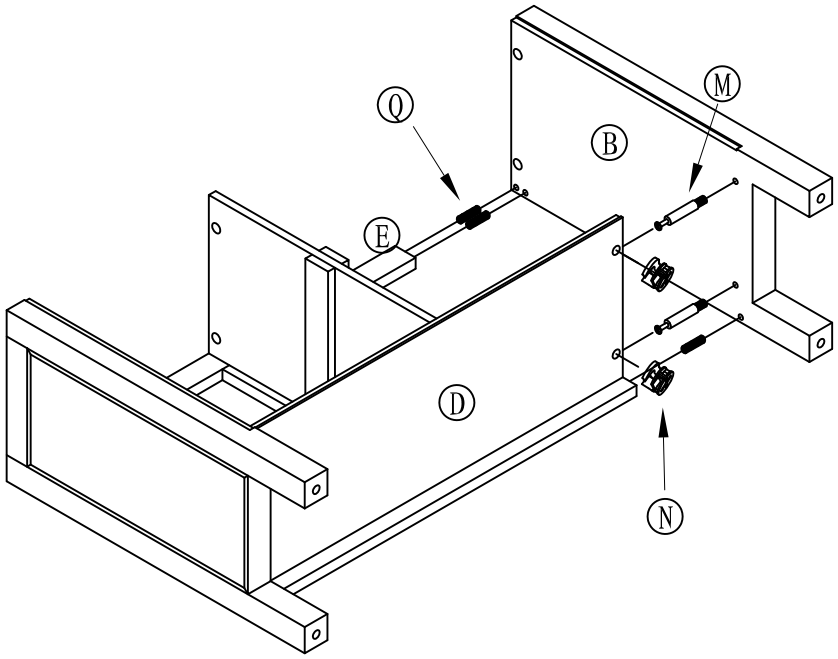

6). ASSEMBLE THE LEFT SIDE PANEL(B).

- ROTATE 2 CAM-BOLTS(M) AND INSERT 3 DOWELS(Q) INTO THE HOLES IN THE LEFT SIDE PANEL(B).
- PLACE THE CAM-BOLTS(M) AND DOWELS(Q) INTO THE HOLES IN THE PANEL(D/E) AND ATTACH USING 2 CAM-LOCKS(N).

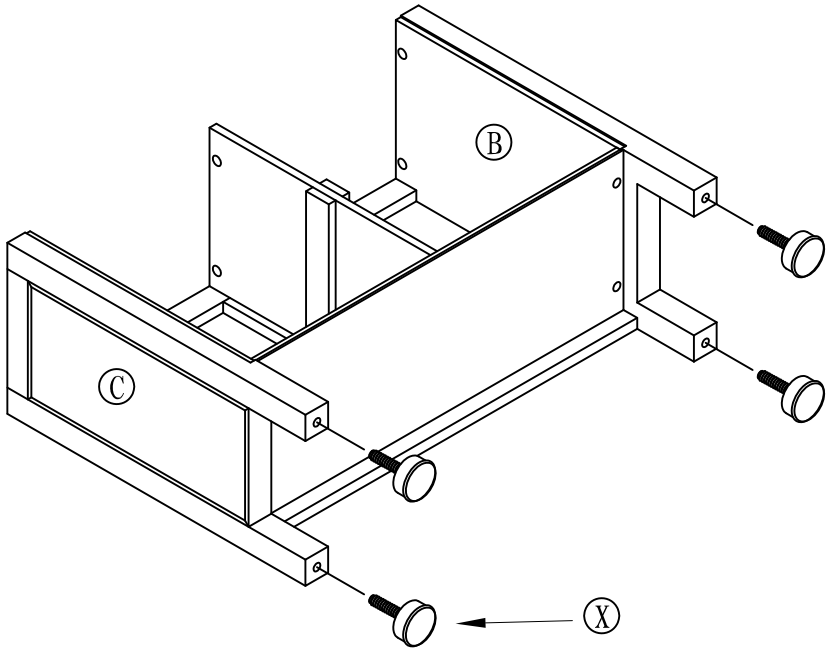

7). ASSEMBLE THE FEET(X).

- ROTATE 4 FEET(X) INTO THE HOLES IN THE SIDE PANEL(B/C).

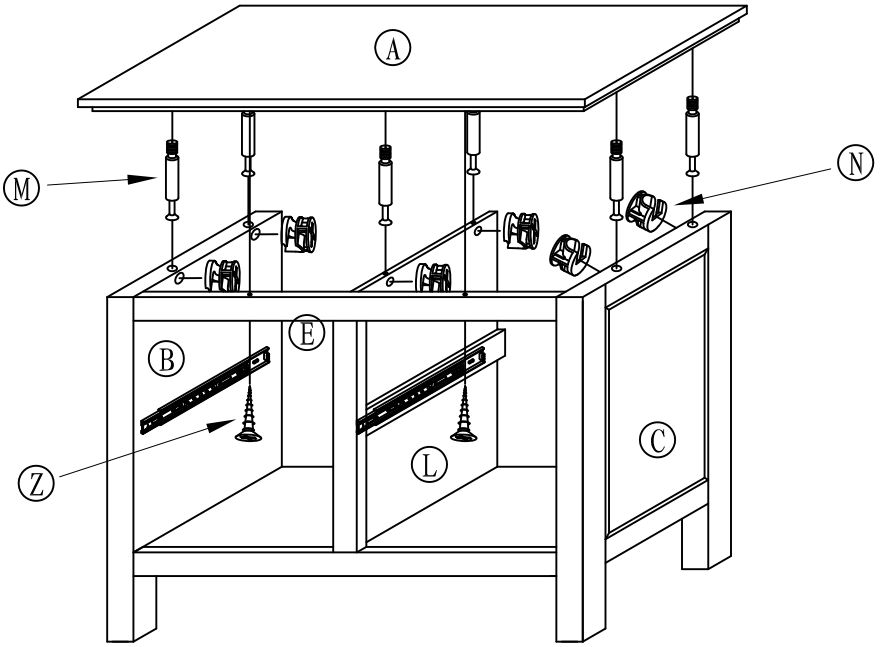

7). ASSEMBLE THE TOP PANEL(A).

- ROTATE 6 CAM-BOLTS(M) INTO THE HOLES IN THE TOP PANEL(A).
- PLACE THE CAM-BOLTS(M) INTO THE HOLES IN THE PANEL(B/C/L) AND ATTACH USING 6 CAM-LOCKS(N).
- ROTATE 2 SCREWS(Z) INTO THE HOLES IN THE PANEL(E).

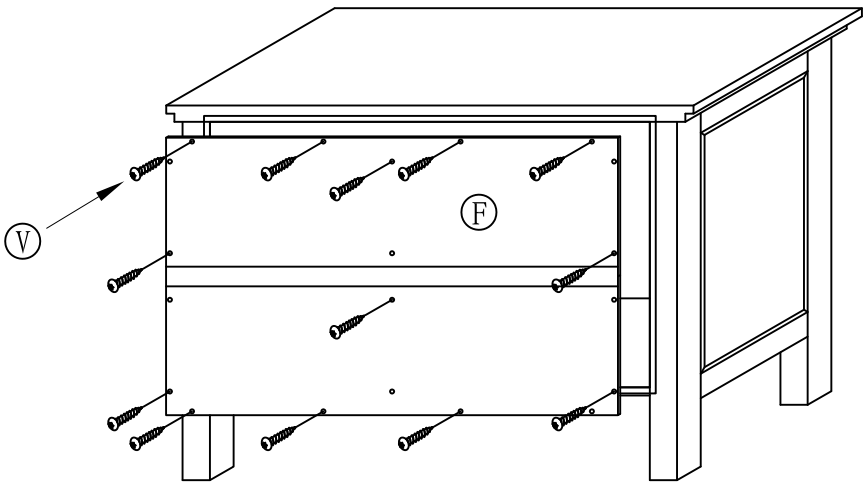

8). ASSEMBLE THE BACK PANEL(F).

- ATTACH THE BACK PANEL(F) USING 20 SCREWS(V).

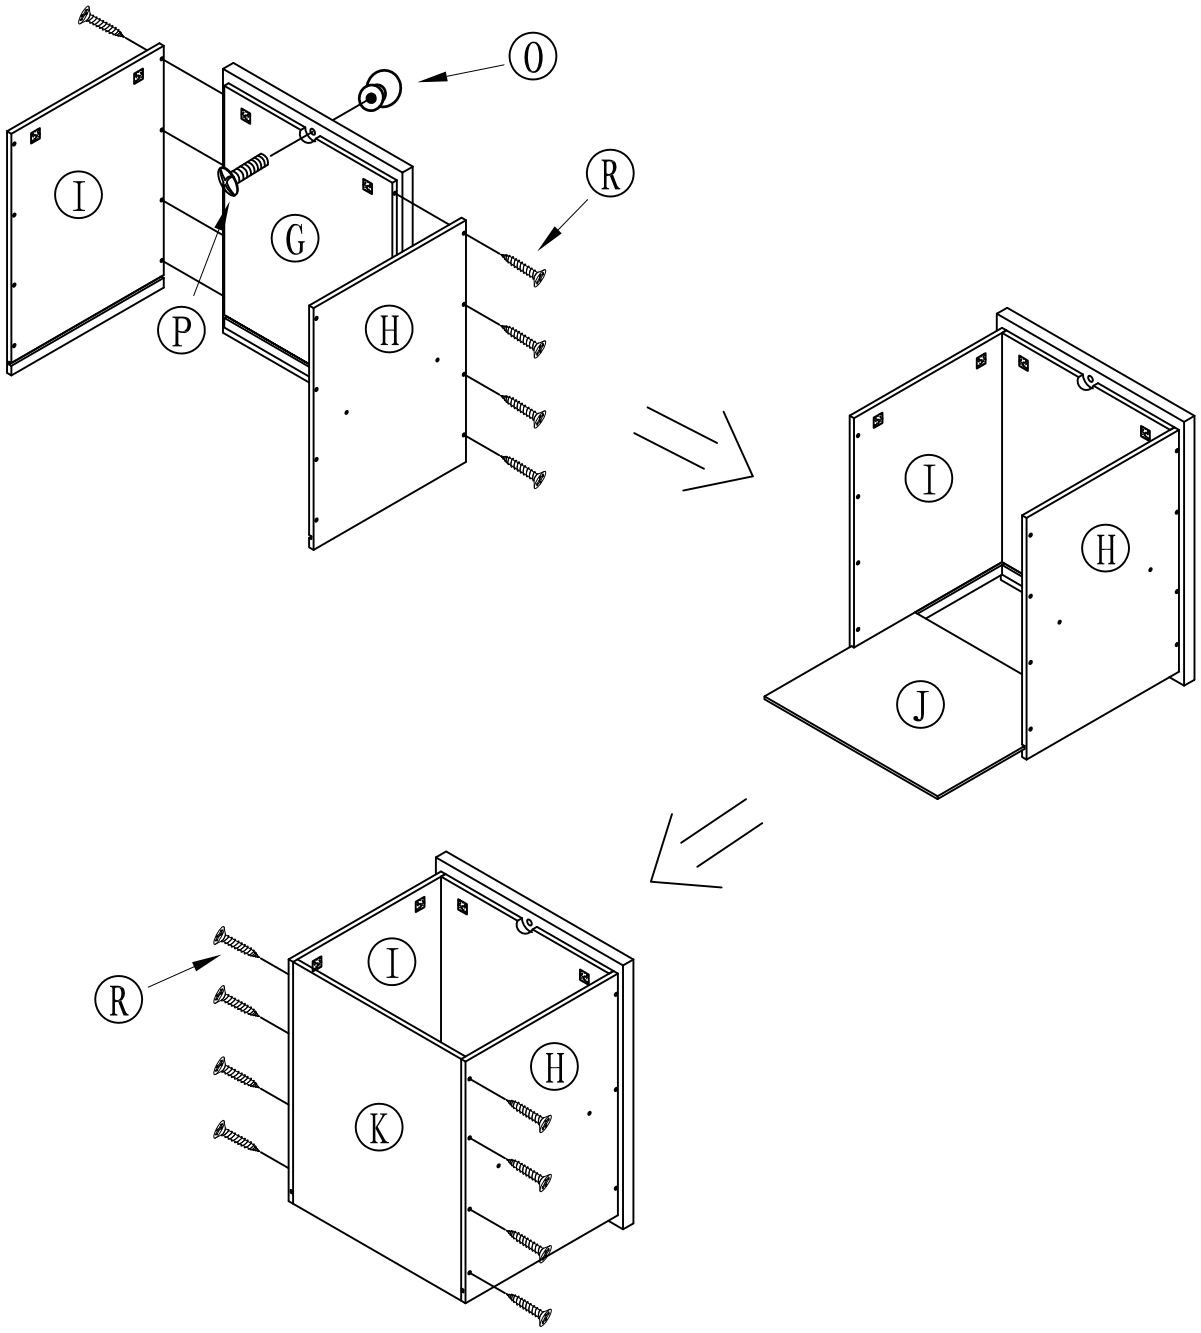

10). ASSEMBLE THE DRAWER.

- ATTACH DRAWER PANEL SIDE(H/I) TO DRAWER PANEL FRONT(G) USING 8 SCREWS(R).
- ATTACH THE HANDLE(O) TO DRAWER PANEL FRONT(G) USING 1 SCREW(P).
- INSERT THE DRAWER PANEL BOTTOM(J) INTO THE SLOTS IN THE DRAWER PANEL SIDE(H/I).
- ATTACH THE DRAWER PANEL BACK(K) BETWEEN LEFT DRAWER PANEL SIDE(H) AND RIGHT DRAWER PANEL SIDE(I) USING 8 SCREWS(R).

ARROW FACES DRAWER FRONT

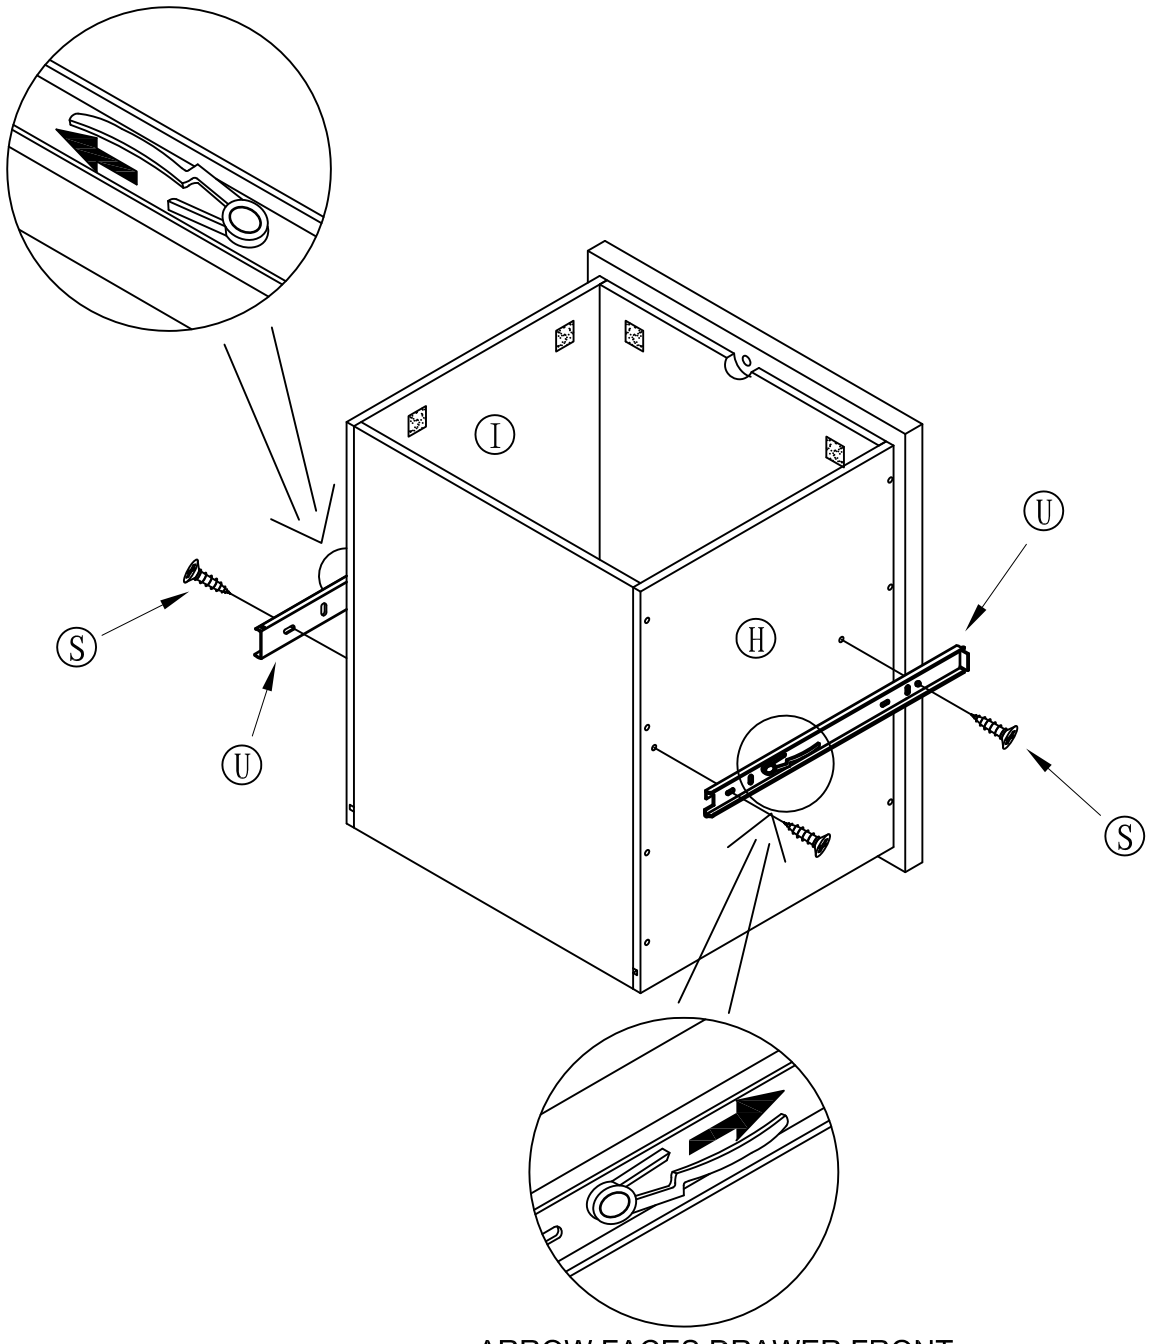

ARROW FACES DRAWER FRONT

11). ASSEMBLE THE INNER SLIDES(U).

- ATTACH THE INNER SLIDES(U) TO DRAWER PANEL SIDE(H/I) USING 4 SCREWS(S).

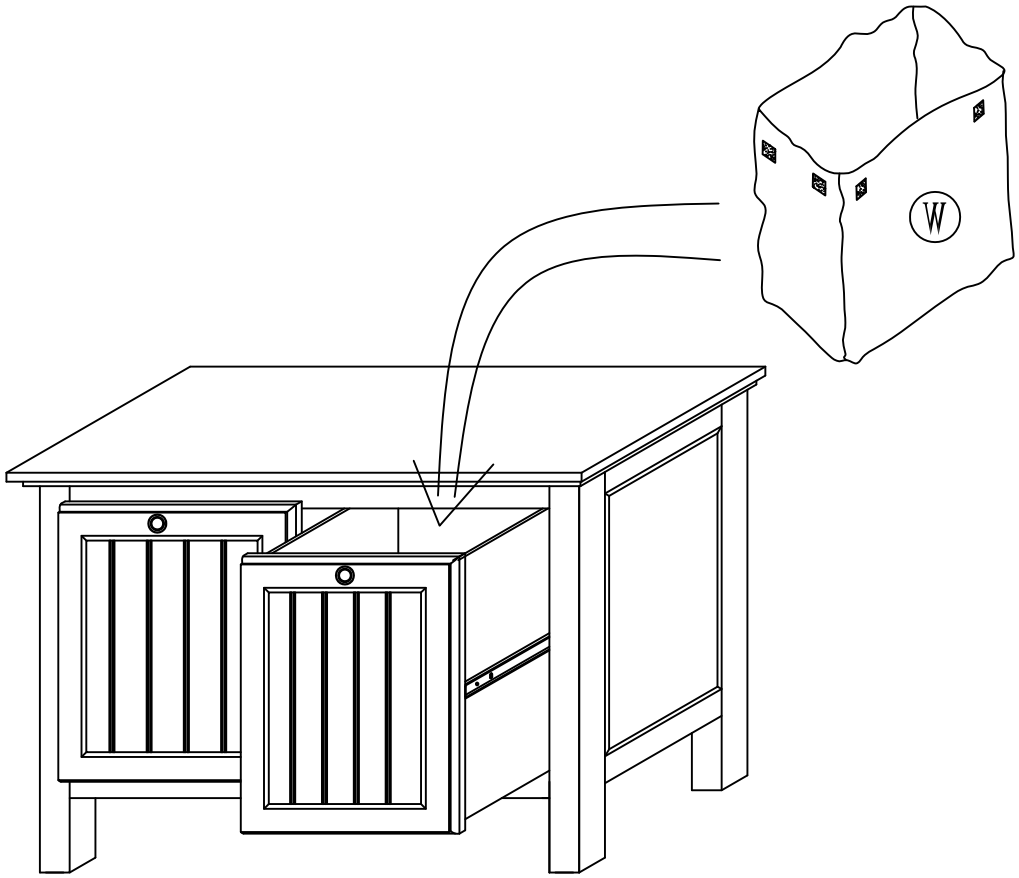

12). ASSEMBLE THE DRAWERS.

- PUT THE BAGS(W) INTO THE DRAWERS.
- INSERT THE DRAWERS INTO THE SLIDERS.